



Soundbar Connection Instructions

Overview of the Ports

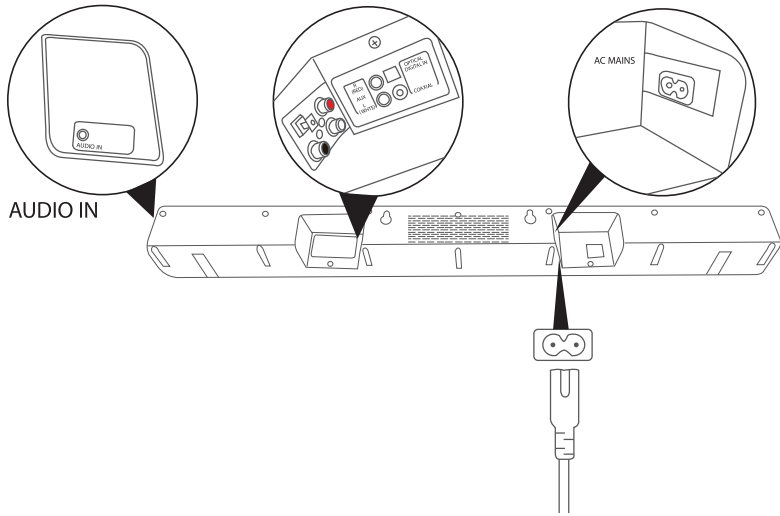


Option 1: Optical (Preferred)


A. Cable Connection
 Note: Make sure to remove the protective covers on the ends of the cable.
 Incorrect insertion will damage the port and / or the connector.

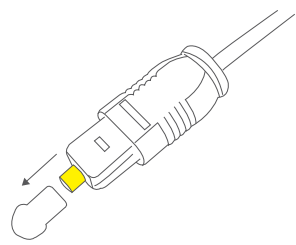

Connecting to your TV Set:

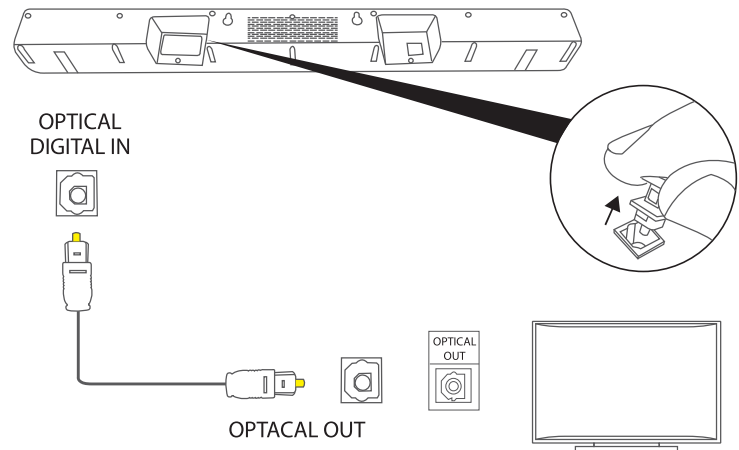


B. Soundbar
 Press the OPT button on the remote to select Optical Mode, the COAXIAL / OPTICAL Indicator on the soundbar will turn solid red.

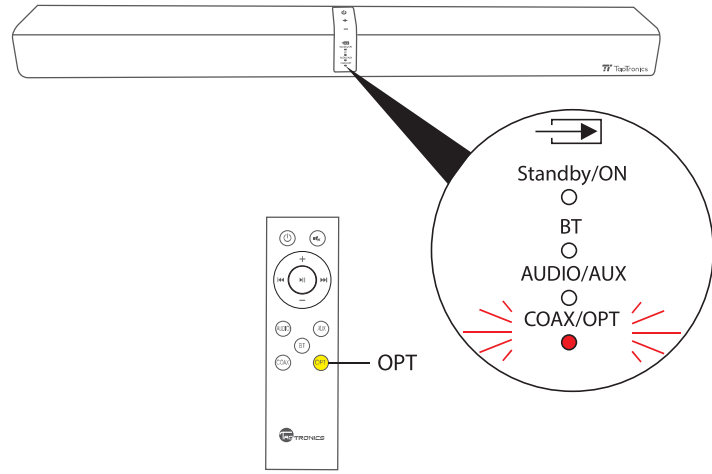


Option 2: AUX (RCA)

A. Cable Connection

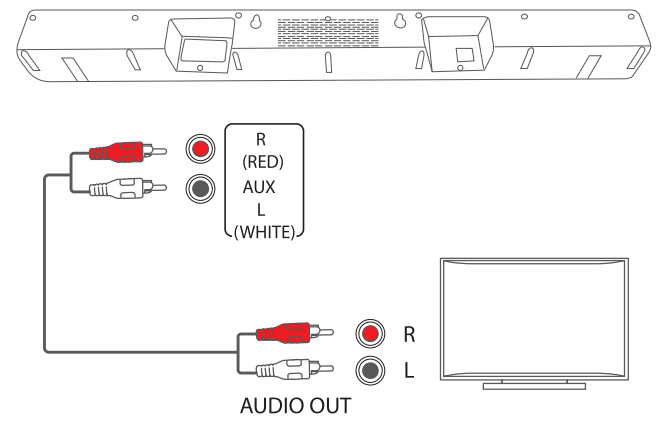


B. Soundbar
 Match the R / L (RED/WHITE) ports for correct connection. Press the AUX button on the remote, the AUDIO/AUX Indicator will turn red.

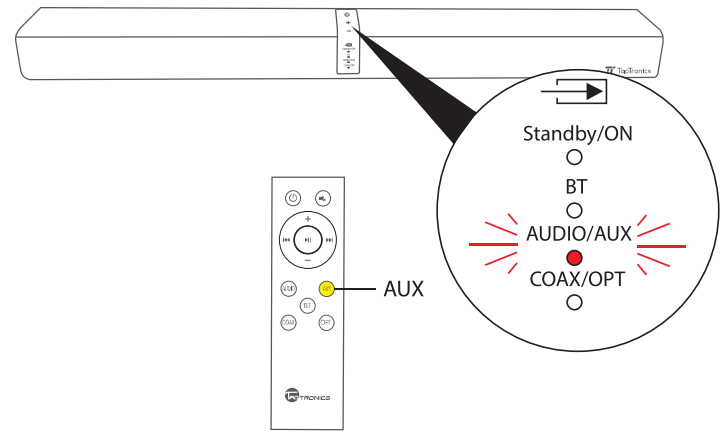


Option 3: Audio (3.5mm Stereo)

A. Cable Connection

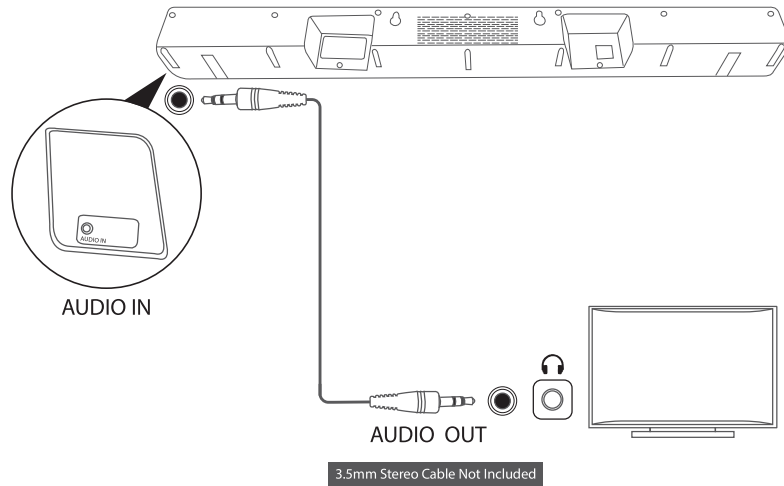


B. Soundbar

Press the AUDIO button on the remote, the AUDIO/AUX Indicator will turn solid green.

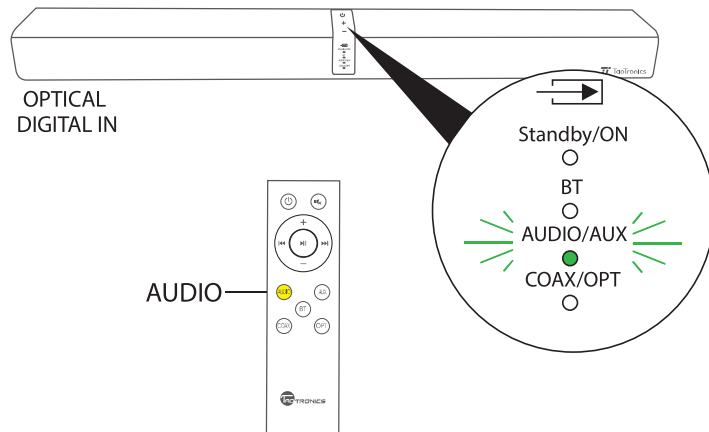


Option 4: Coaxial

A. Cable Connection

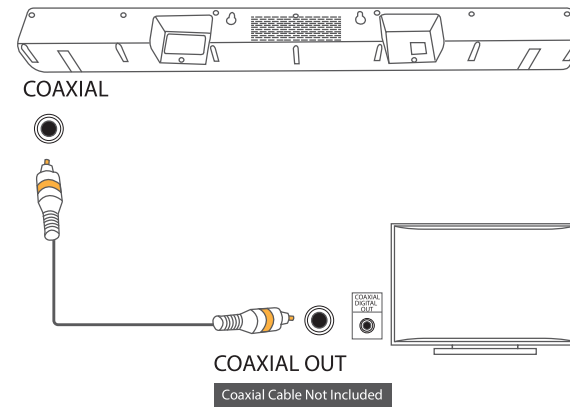


B. Soundbar

Press the COAX button on the remote, the COAXIAL / OPTICAL Indicator will light up in green.

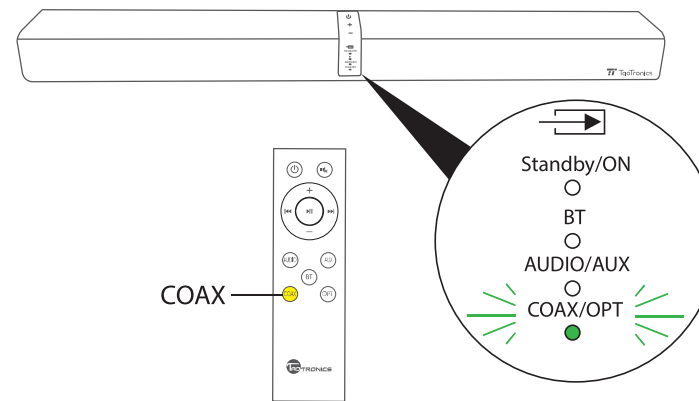

Connecting with Other Host Appliances

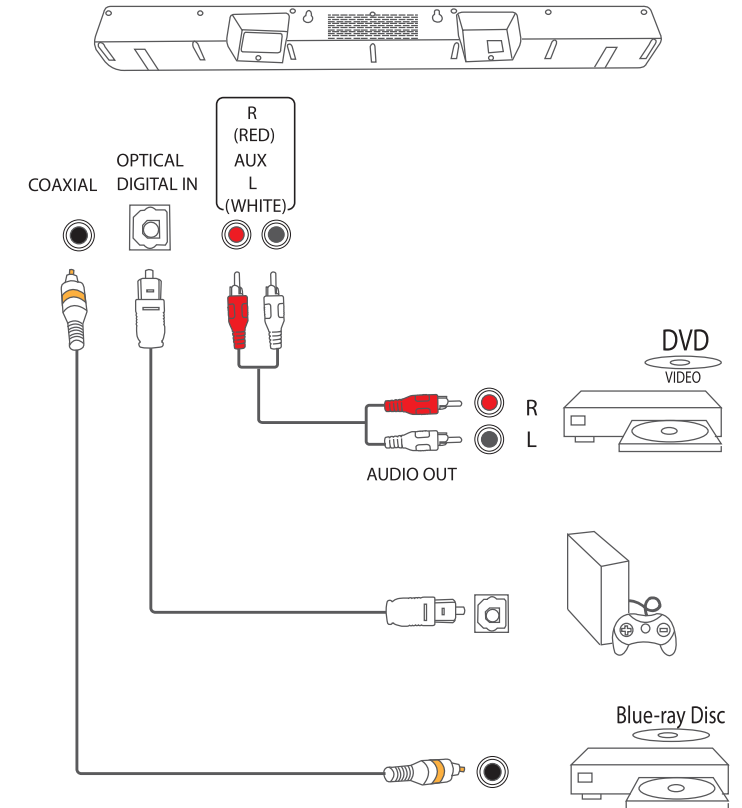

Note

- If you choose the 3.5mm to RCA cable, be sure to select the audio output port on the TV. To connect with the optical cable, please set your TV audio output to PCM on your TV remote (TV Setting – Sound - Select Speaker to External Speaker / Turn off TV Speaker).
- This Soundbar does not support Dolby Audio and DTS.